



Classic

Installation Instructions

WARM AIR HAND AND FACE DRYER

IMPORTANT

- These appliances are intended for connection to fixed wiring.
- Check that the electrical rating shown on the Dryers matches the mains supply.
- **WARNING: THIS PRODUCT MUST BE EARTHED.**
- All installations must be supervised by a qualified electrician.
- Installations and wiring must conform to current IEE Regulations (UK), local or appropriate regulation (other countries).
- These appliances are not to be used for domestic purposes but solely in commercial premises.

INSTALLATION

I. LOCATION - DO NOT POSITION ABOVE A WASH BASIN, SHELF OR REFLECTIVE SURFACE AS THIS MAY CAUSE SENSOR MALFUNCTION. HEIGHT OF THE WARM AIR OUTLET ABOVE FLOOR LEVEL :

MEN	- 120 cm
WOMEN	- 110 cm
CHILDREN	- 90 cm
DISABLED	- 97 cm

II. Dismantling - Removing the cast metal cover requires careful attention to the instructions. The dryer has been designed this way to discourage tampering by unqualified persons.

- Insert the Allen Key provided into the plain holes at the bottom of the cover on either side of the air inlet grille. Rotate the key CLOCKWISE until a firm resistance is felt. Repeat this operation with the second screw.
- To remove the cast housing, position the unit with the inlet/outlet grille facing you. Place a hand on each side of the housing and give a sharp short push away from you, this will release the housing from its seal. The housing can then be completely removed by lifting off.

III. Fixing -

- Using the paper base-plate template provided, hold this against the wall in the position required for the dryer and mark the centres of the four mounting holes and the power supply cable entry, on the wall.
- Drill holes for either 6 mm masonry bolts, or for wall plugs to suit 60 mm (2¹/₂ ") x No. 12 screws.
- Make provision for the electrical connection.

IV. Assembly -

- Feed the power supply cable through the entry hole in the back-plate.
- Fasten the back-plate to the wall with the four bolts or screws previously drilled in section III.
- Connect the supply cable as follows:

The green and yellow wire to the earth terminal marked \perp , the brown wire to the terminal marked (L) and the blue wire to the terminal marked (N). A fused double pole isolating switch having a contact separation of at least 3 mm in all poles, must be provided in the installation adjacent to the dryer. All wiring must conform to current IEE Regulations (UK), local or appropriate regulation (other countries).
- Secure the cable by the clamp provided.
- The outer cover is replaced by positioning it flat against the wall above the back panel and carefully lowering onto the panel.
- Insert the Allen Key into the holes on either side of the air inlet grille. When engaged with the socket head screw rotate ANTICLOCKWISE (i.e. unscrewing) the bolts until they are firmly located in the cover - care should be taken not to over-tighten.
- The unit will operate when hands are held approximately 10 cm (4") under the dryer outlet and will continue to run until the hands are removed, when the dryer will automatically switch off.

V. Maintenance -

- Prior to carrying out any maintenance, ensure that the mains electrical supply has been disconnected.
- The cover should be wiped occasionally with a damp cloth to remove surface marks. Do not use abrasive cleaning agents. Every six months (more frequently in a dusty environment) the inlet should be cleaned with a small brush to remove accumulated debris.

VI. Service -

- The Hand Dryer has been designed to provide exceptional reliability and should not require replacement parts during its life. If a fault develops a qualified electrician should be called.

